

Porsche 987.1 Boxster - Manual Stainless Steel Sports Grille Kit

Kit Contents: -

- 1. off Centre Grille
- 2. off No 6 x 2 ½ " Screws



Centre Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate Grille Level with aperture as shown in Fig 1.
3. Insert screw into RH side diamond through mesh and tighten down as shown in fig 2 then repeat for opposite end diamond (do not over tighten).
4. Remove the tape and the grilles are now complete.



Fig 1

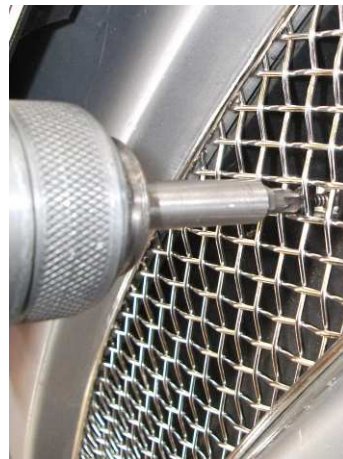


Fig 2

Porsche Boxster 987 Stainless Steel Sports Grille Kit

Kit Contents: -

- 1. off LH Side Grille
- 1. off RH Side Grille



Side Mesh Grille Fitting Instructions

1. Clean out the debris from the inside of the air intake.
2. Fit masking tape around the apertures to protect the paintwork while fitting.
3. Offer the LH/RH mesh grilles to the aperture
4. Hook the outer bracket inside the aperture.
5. Push the grilles into position and hook the other brackets into the aperture
6. Check all of the brackets have engaged fully. (If any of the brackets are not clipped behind the plastic push them down with a long screwdriver while putting a little pressure on the front face of the grille)
7. Remove the tape and the grilles are now complete.



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.